

**CLEVELAND[®]
CONTAINERS.**

INSULATED CHEMICAL STORE

YOUR FLAT PACK
CONSTRUCTION GUIDE



OWN YOUR SPACE.[®]

STORE INSTRUCTIONS MANUAL

Please read all of the information below before you begin assembly.

To assemble your Store, you will need a cross-point screwdriver, 13mm and 19mm socket set and a flat screwdriver.

Notes for assembly

1. For the best results, assemble your Store on level ground so as to avoid bending of the chassis and complications with the aligning of the panels.
2. On initial assembly, only hand-tighten all nuts and bolts, when assembly is complete tighten all nuts and bolts with your socket spanner.
3. Retain all parts if demounting.

Notes after assembly

1. You can return your Store back to it's original flat pack form at any time.
2. Store is not designed to be stacked when it is assembled.
3. Oil the lock / hinges regularly.

Video guides


If you'd prefer to follow along with a video construction guide, you can scan this QR code or [visit our YouTube channel here](#).




If you are experiencing any issues assembling your flat pack unit, please contact your sales representative.

1. UNPACKING


A. Your Store arrives flat-packed

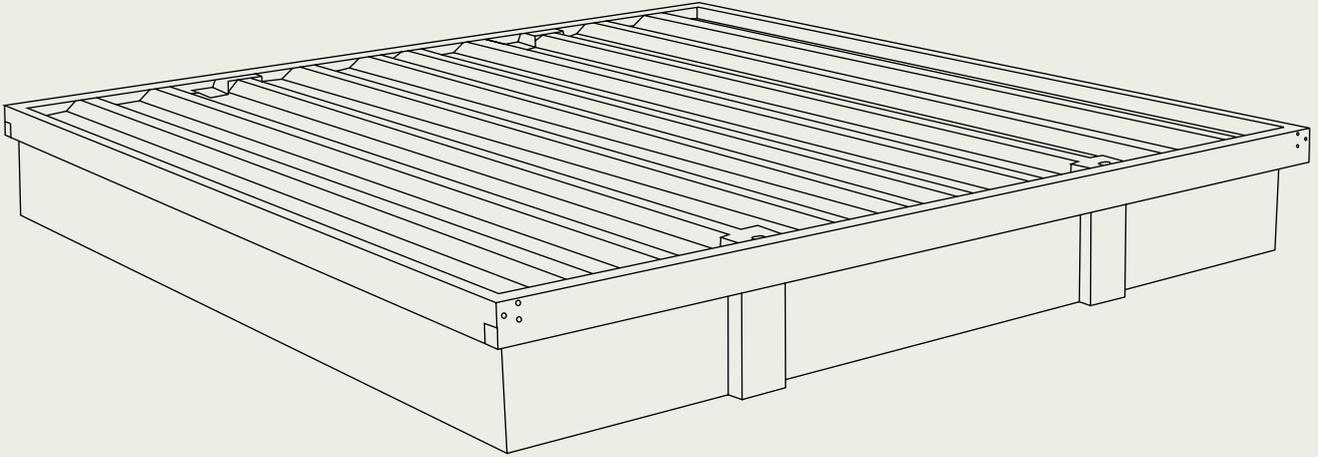


B. Undo and remove the 4 retaining bolts with your 13mm socket spanner (retain these for future use in case you want to return the Store to its original flat-pack form)

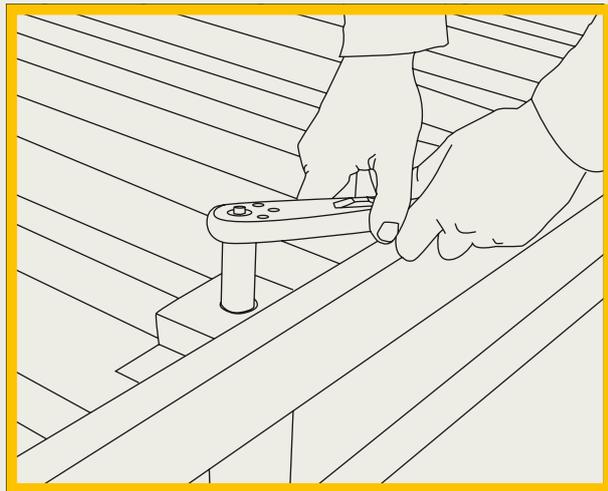


C. Remove the roof panel

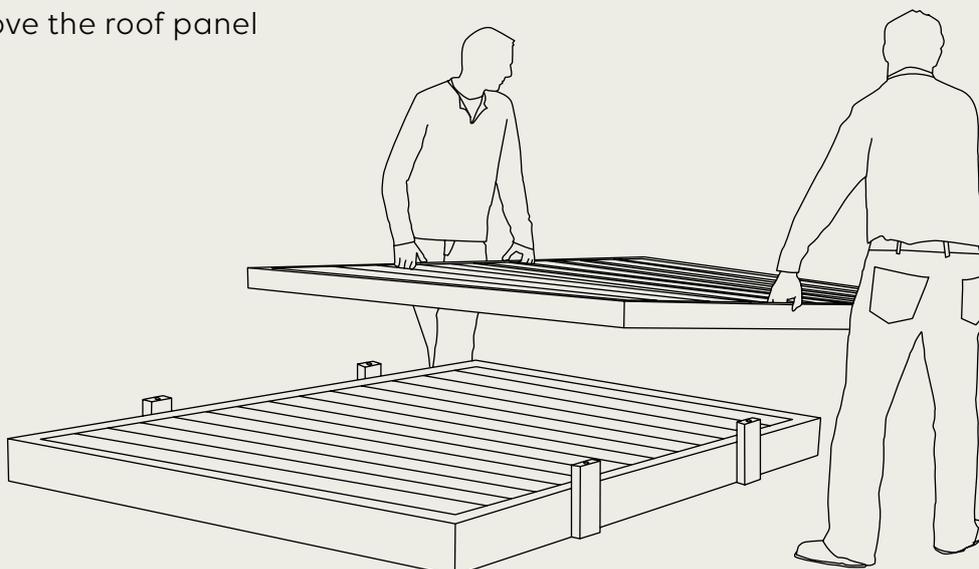

D. Remove the lifting brackets (retain these for future use in case you want to return the store to its original flat-pack form)

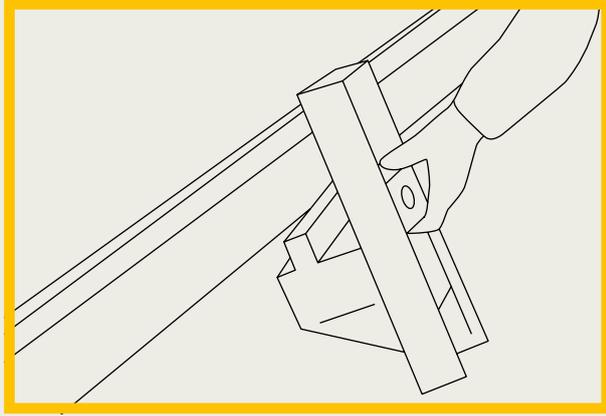


D. Remove all of the panels and contents, leaving the base/chassis in your desired position

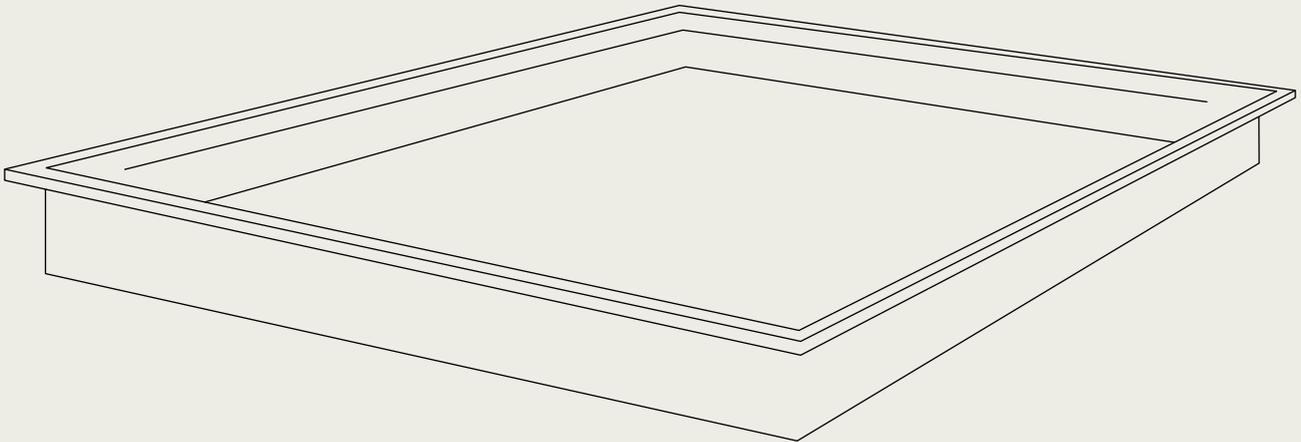


2. CORNER POSTS & WALLS

Corner Posts Note


If you purchased a 2m unit, each corner post will come in two parts. Parts "a" and "b" should be bolted together as shown.

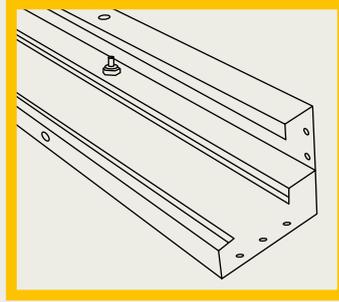


A. Ensure the base of your unit is positioned on level ground and in its intended location

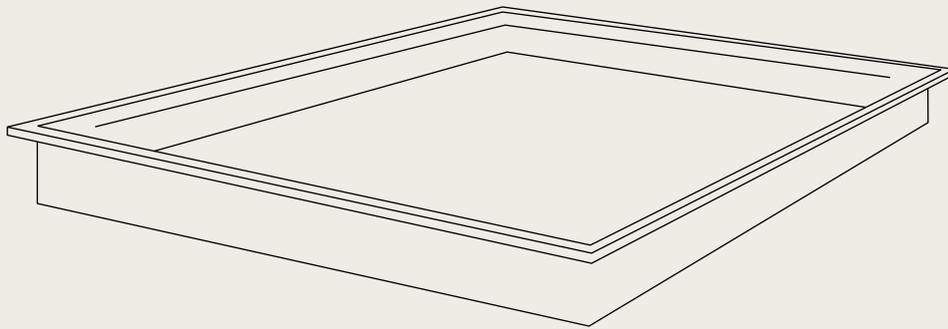


B. Add the fixing corner plates to the four corners of the base

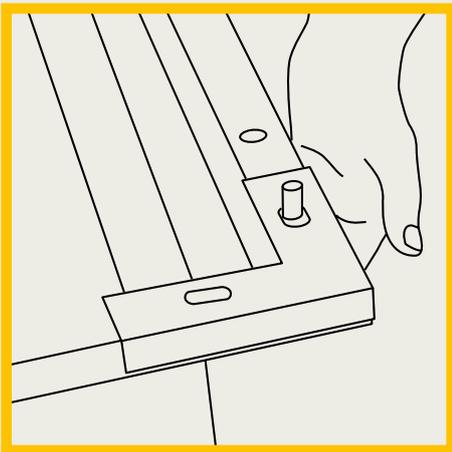

C. The six holes at the end of each corner post should be positioned at the top

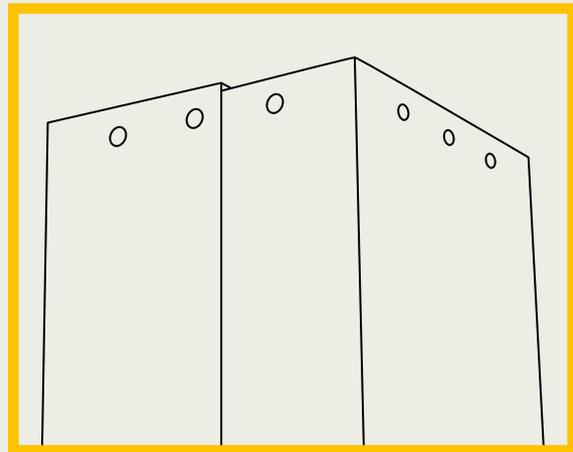


- D. Fix the four corner posts to the base using the bolts provided. The bottom of each post should overlap the outer edge of the base.

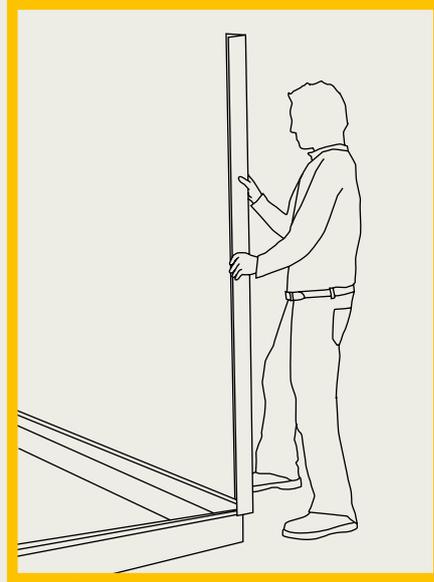

- E. Lift the three wall panels into position (leaving the door panel) and fix to the base. Check that the wall panels overlap the edge of the base.




- F. Hand tighten the bolts that fix the walls to the base and corner posts.

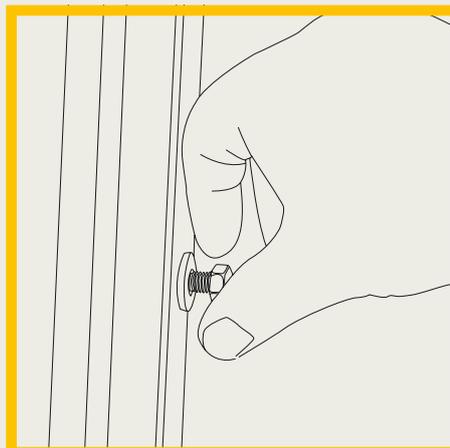

3. FLOOR, DOOR & ROOF

- A. Once the three wall panels are in position, place the floor grates into the base. These are supported by the edge of the sump base, creating a suspended floor.

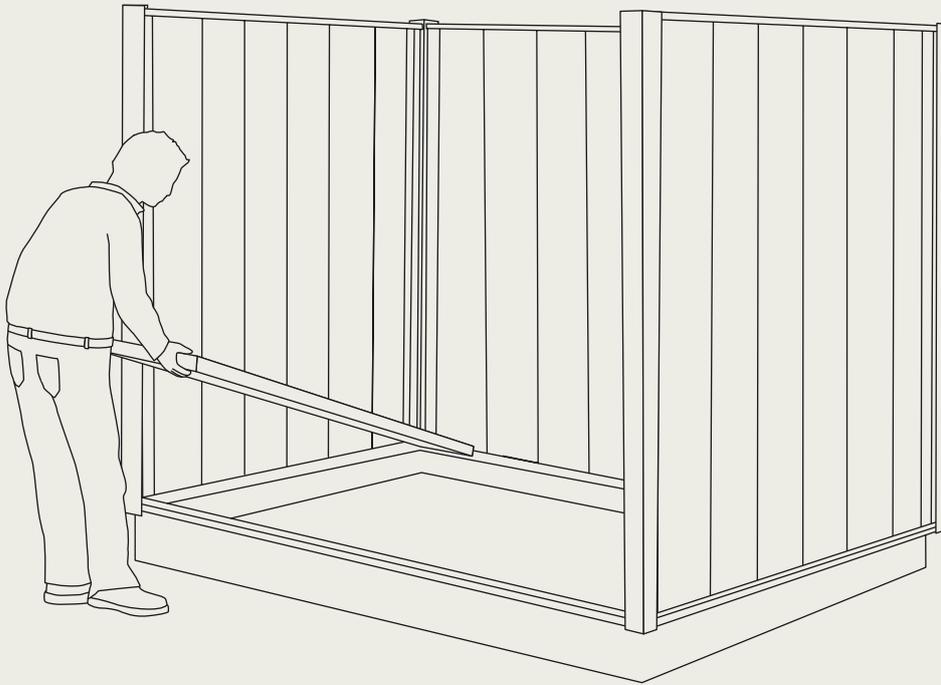

- B. Once the three wall panels are in position, place the floor grates into the base. These are supported by the edge of the sump base, creating a suspended floor.




C. Once the walls are in place, carefully lift the roof panel onto the unit



D. Once in position, pull the roof so that it locks into position all the way around





E. Fit the door handles using a screwdriver

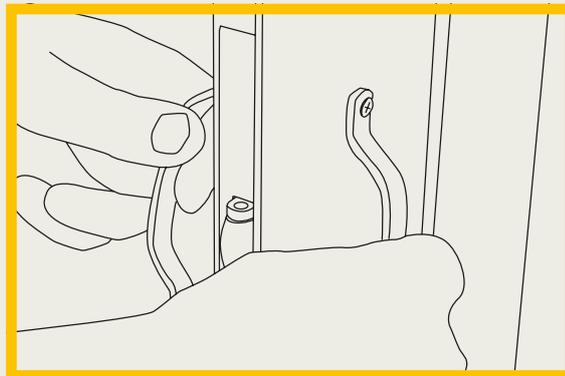


5. LIFTING EYES

- A. Install the lifting eyes by aligning the L-shaped bracket and lifting eye bracket and securing with 3 bolts and washers - this will secure the roof in place

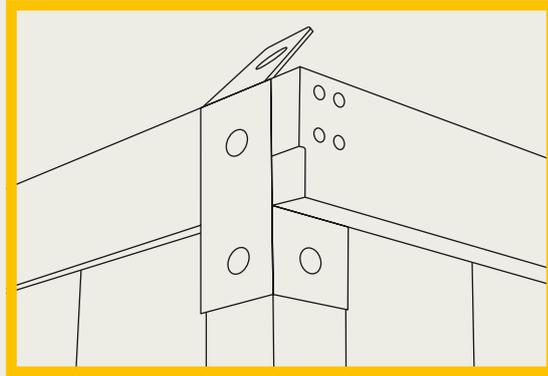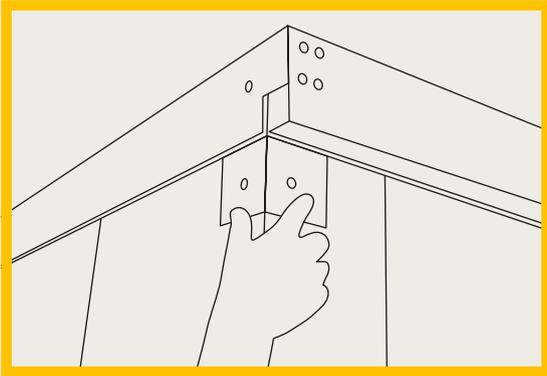


6. FINAL TOUCHES

- A. Attach the long L-profile corner brackets to the inside of each corner - slide them up into the top corner, then slot them into the floor chassis

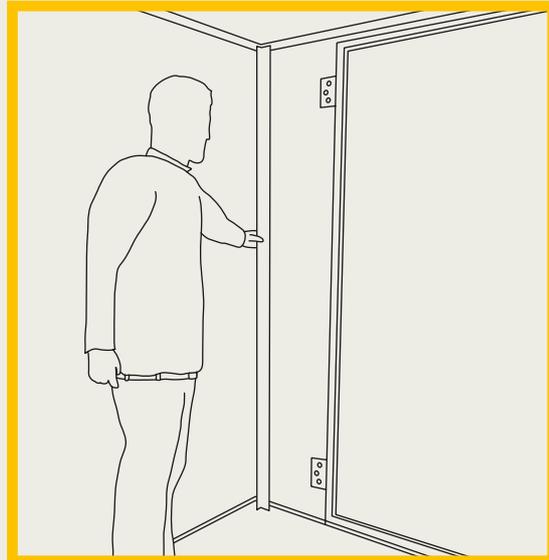

Make sure to fully tighten all nuts and bolts before using your new container!

YOUR STORE IS NOW READY TO USE

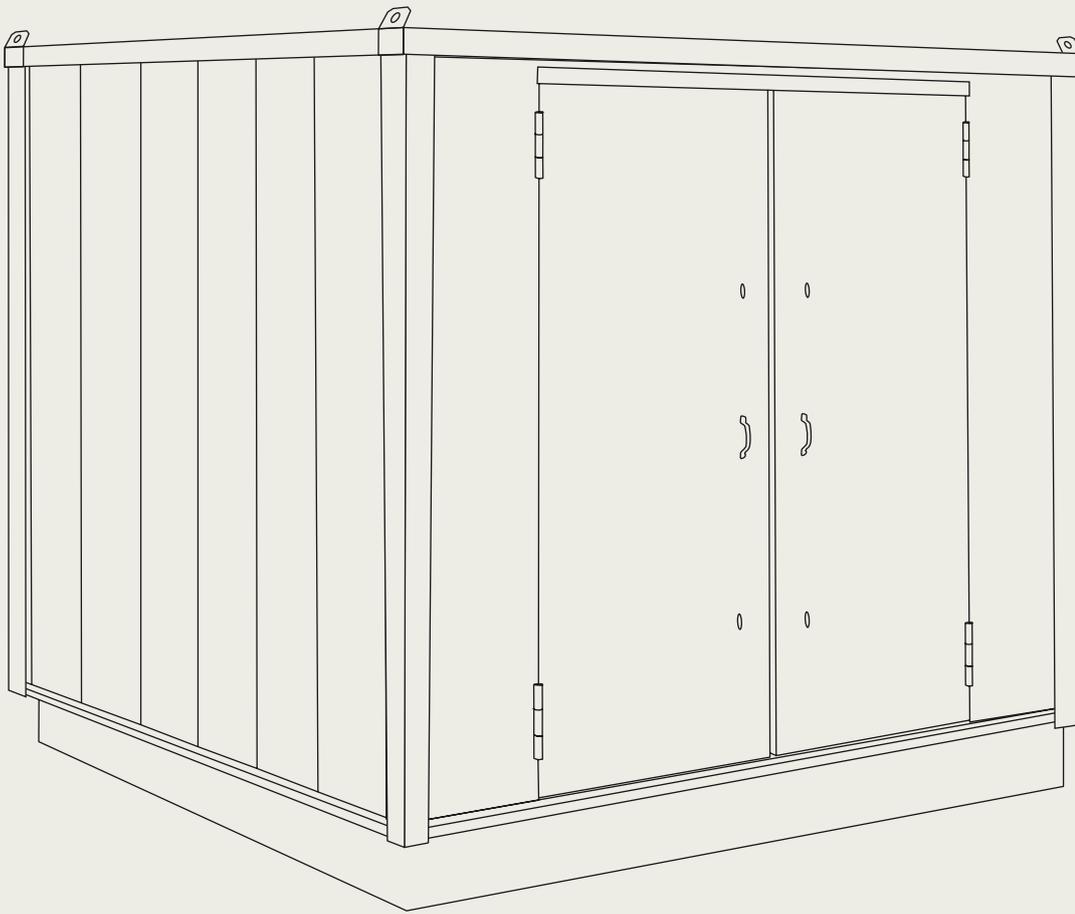

**Thank you for choosing a Flat Pack Insulated
Chemical Store from Cleveland Containers.**

**CLEVELAND[®]
CONTAINERS.**

Part of the **CLEVELAND[®]** group

OWN YOUR SPACE.[®]

23a Falcon Court, Stockton-on-Tees, TS18 3TX
0330 005 5666 | sales@clevelandcontainers.co.uk